

## **WARNING JACKHAMMER TILE REMOVER on CART KIT**

Any piece of equipment can be dangerous if not operated properly. **YOU** are responsible for the safe operation of this equipment. The operator must carefully read and follow any warnings, safety signs and instructions provided with or located on the equipment. Do not remove, defeat, deface or render inoperable any of the safety devices or warnings on this equipment. If any safety devices or warnings have been removed, defeated, defaced or rendered inoperable, **DO NOT USE THIS EQUIPMENT!!!**

 **WARNING:** This product can expose you to chemicals including lead, which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.P65warnings.ca.gov](http://www.P65warnings.ca.gov)

**DANGER:** This equipment has and creates Multiple Pinch Points. Use extreme caution whenever using this equipment.

Always wear personal protection equipment, gloves, safety glasses, hearing protection, dust mask, and steel toed boots.

### **WARNING**

Do not tape down or otherwise by-pass any safety devices! Always operate this equipment from the designated operator's position.

Never operate power equipment of any kind if you are tired or if you are under the influence of alcohol, drugs, medication or any substance that could affect your ability or judgment. Be alert! If you get tired while operating this equipment, take a break. Tiredness may result in loss of control.

Use extreme caution: The bit is very sharp! Keep your hands, feet and all other body parts clear of the bit at all times.

This 120-volt equipment may require a grounded outlet, do not modify plug.

Warning bit gets very hot during use. Use care when changing blades.

Don't Abuse Cord - Never carry tool by cord, or yank it to disconnect from receptacle.

Do not use around flammable liquids or gasses, sparks could cause fire or explosion.

 **WARNING** Ensure the machine is switched OFF before plugging in

 **CAUTION** Ensure Tile Smasher Removal Tool is correctly inserted and locked in position before use

1. Ensure Hammer is secure in clamping mechanism and cannot rotate.
2. Position and angle before commencing work.  
To change angle - lift handles to take weight off lock mechanism then pull the brake lever to disengage the lock mechanism. Lift or lower the height of the handles to achieve the desired angle of jackhammer then release brake lever to reengage the lock mechanism.
3. Never allow Hammer or Tile Smasher Removal Tool to overheat.
4. Switch on with trigger
5. Lock into position with trigger lock
6. Refer to Hammer Instruction Manual for more detail on operation and service

 **WARNING** Always switch off machine before unplugging

If the person receiving this handout will not be the user of the equipment, forward these instructions to the operator. If there is any doubt as to the operation or safety of the equipment, **DO NOT USE!!! CALL A TOOL SHED IMMEDIATELY!!! FAILURE TO FOLLOW THESE INSTRUCTIONS COULD RESULT IN INJURY OR DEATH**